




# Flocking Machine User Manual



256-229-5551  
24-Hour Technical Support: 888-391-7669  
[www.snowmasters.com](http://www.snowmasters.com)  
Lifetime Warranty

© 2009 SnowMasters

# Flocking Machine Controls

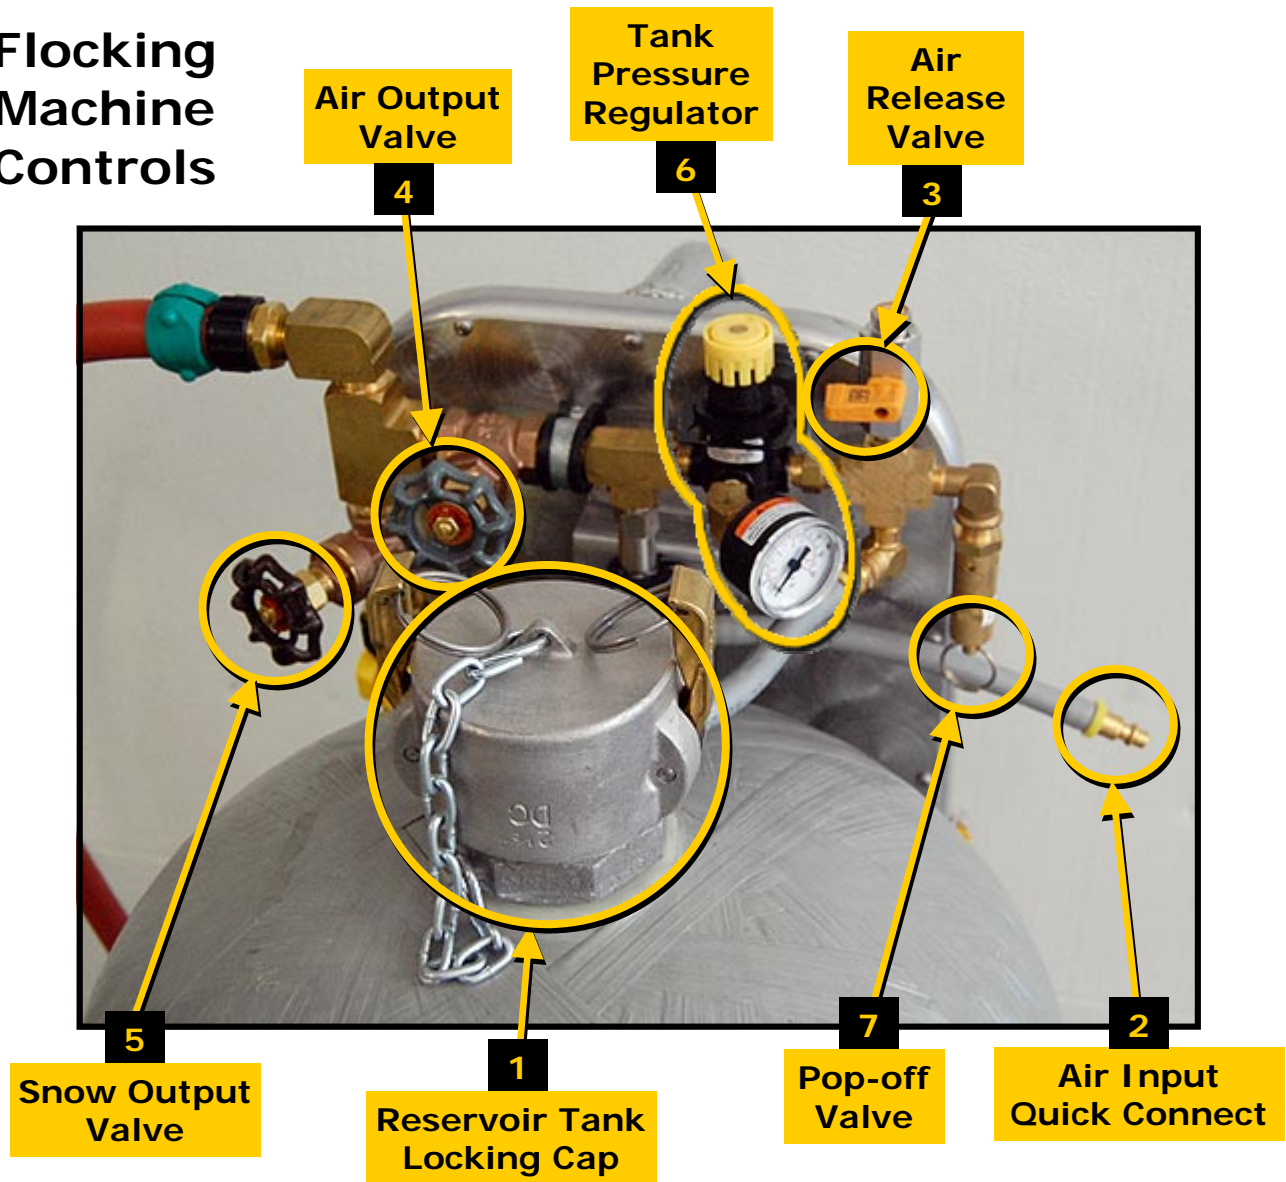

## Instructions

- 1) Fill the reservoir tank **1** with 113 liters/30 gallons of water.
- 2) Add 2400ml (81oz.) of snow flocking fluid to the reservoir tank. **1**
- 3) Replace the locking cap onto the reservoir tank *securely*.
- 4) Connect the air line from the compressor to the air input quick connect. **2**
- 5) Make sure the air release valve, **3** air output valve, **4** and snow output valves **5** are closed.
- 6) Make sure to set the tank pressure regulator **6** to approximately 60psi. (machine is equipped with a 75psi pop-off valve **7** for safety purposes)
- 7) While directing the red hose at the application area, open the air output valve **4** and the snow output valve **5** to begin distributing snow. (It is suggested that the air valve be opened first, followed by the snow valve.)
  - Adjust the snow and air valves as needed to obtain the desired distance and consistency.

## Precautions & Troubleshooting

- 1) **DO NOT** set the tank pressure regulator **6** above 70 PSI. The recommended setting is 60 PSI.
- 2) Before removing the reservoir tank locking cap, **1** disconnect the air input quick connect, **2** and open the air release valve **3** or the air output valve **4** to bleed any remaining air from the system.
- 3) If the machine is not producing snow, check the valves, locking cap, and hose connections.

